

## OilGuard Ex

## On-line Oil in Water Analyzer



### **Applications**

- Produced water discharge or reuse monitoring
- Monitoring effectiveness of oil separators
- Detection of oil leakage into cooling water/waste water
- Slop tank overboard discharge monitoring

### Industries

- Crude oil production offshore & onshore
- Refineries
- Petrochemicals
- Power plants
- · Ship building

### **Advantages**

- Well-proven UV-Fluorescence measuring principle
- True non-contact measurement in a free-fall stream
- Dual-beam optics for highest accuracy and stability
- Integrated operation panel with touch screen, color display and data logger
- Flexible, modular system
- · Fast recalibration with checking unit
- Minimum maintenance requirements
- Correlates to any International recognized standard reference method

## OilGuard Ex

### On-line Oil in Water Analyzer

### Innovations with real benefits





### Modular design

The system design can be tailored to suit specific installation requirements:

- 3 various measuring cells.
- Select a single analyzer or a complete pre-mounted system.
- Optional sample conditioning system, including pumps are available.
- Optional integrated sampling station for QC purpose.

### Lowes cost of ownership **Negligible maintenance**

SIGRIST's well-proven true non-contact measuring concept prevents the entire system from scaling. This leads into a amazing long maintenance interval:

- No ultrasonic cleaning device is needed.
- The negligible maintenance is guick and easy no special tooling is required.

# - Lab OilGuard

### Reliable measurement

The instrument uses a sophisticated dualbeam optical setup with optimized wavelength configuration:

- Guarantees highest accuracy and stability of the measurement.
- Fluctuations and light source ageing are automatically compensated.
- The relevant HC components are measured.
- · Reduces the impact of solids.

### Instant reading verification

Quick reading verifications and instrument recalibration with the unique secondary solid reference standard from SIGIRIST:

- No chemicals are needed for recalibration or cleaning.
- · No special tooling is required.

### Integrated control unit

The control unit in the OilGuard is based on an integrated colour touch screen:

- · Values, graphs, alarm- and status messages can be presented upon customer desire.
- An internal data logger allows recalling and displaying measured data of the last 32 days.

### **Technical Data**

### OilGuard Ex Oil in Water Analyzer:

UV-Fluorescence Measuring principle: Measuring span: 0 .. 100 FLU 0 .. 1000 ppm oil\*1) Measuring ranges: 8, freely configurable 0 001 FLU\*2

Resolution: Reproducibility: +/- 0.002 FLU / +/- 2 %\*2) Response time: < 2 s (step response → limit switch) Installation:

On-line side stream Sample connection: Inlet: ¾" NTP / 16 mm Outlet: 2" NTP / 50 mm

Material, wetted parts: Material housing: PVDF 316L SS / 1.4404 1.3 .. 1.9 gpm / 5 .. 7 l/min Sample flow rate:

Sample pressure: atmospheric max. +203 °F / +95 °C -4 .. +104 °F / -20 .. +40 °C Sample temperature: Ambient temperature: (with cooling system

max. 122 °F / 50 °C) 0 .. 100% RH Ambient humidity: IP66 Protection degree:

Ex px ib IIC T4 Gb Ex protection class: 230V 50/60 Hz, Power supply: 100/115/130V

Power input max: 65 W 14 × 20 × 27" Dimensions:

 $35 \times 50 \times 70$  cm (W × L × H)

82 lbs. / 37 kg Weight:

#### Operation:

1/4VGA, 5.7" Display: Operation panel: Touchscreen 1 × 0/4 .. 20 mA. Outputs galv. separated 2 × relay contacts,

3 × digital, freely configurable 4 × digital, freely configurable Inputs: Digital Interface:

Ethernet, Modbus TCP microSD-card

Hart, Profibus DP, Modbus RTU Optional:

### Accessories:


Sample conditioning system Sample feed pump Sample return pump Mounting rack Integrated statutory sampling point

- 1) Depending on the oil characteristics
- \*2) Referred to quinine sulfate in water





Your representative:

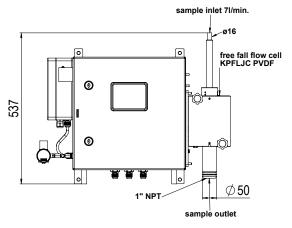



### SIGRIST-PHOTOMETER AG

Hofurlistrasse 1 · CH-6373 Ennetbürgen Tel. +41 41 624 54 54 · Fax +41 41 624 54 55 www.photometer.com · info@photometer.com