

OilGuard 2 W

Oil trace monitor for water treatment



Applications

- · Monitoring oil traces in raw water
- · Monitoring oil traces in surface water
- Monitoring oil traces in process and waste water

Industries

- Drinking water treatment
- Waste water treatment
- Industrial waste water

Advantages

- Proven UV fluorescence measuring principle
- True non-contact free-fall measurement and thus extremely low maintenance
- Re-calibration with secondary standard
- Measurement also possible in turbid water
- Convenient operation via colour touchscreen display
- Display of values and / or graphs visualizing the measurements of the past month
- Correlates with all internationally acknowledged reference methods

OilGuard 2 W

Oil trace monitor for water treatment

Innovations with tangible benefits



Non-contact free-fall measurement

The OilGuard 2 W detects oil traces in a free-falling stream that eliminates contact between the water and the optics.

- There are no reading falsifications resulting from window soiling.
- · Low and high values can be measured precisely.
- The measurement of the complete sample stream provides a representative
- There is an extremely low need for maintenance.



Extremely high resolution

The ingenious instrument design of the OilGuard 2 W in combination with the high quality of its optical components minimizes the effect of interferences. Thus, even the smallest traces of oil can be detected.

- A stable measurement below 1µ/l (ppb) is possible.
- A stable zero point guarantees the long-term stability of the measurement.



Adjusting the instrument to customer specific oils

The instrument can be adapted to various types of oil to meet customer requirements.

Checking the instrument is easy with corresponding solutions.

The instrument's factory setting is calibrated with 16 EPA-PAH standard. The OilGuard 2W can be recalibrated by the customer with a secondary standard (solid reference) which allows an exact recalibration without 16 EPA- PAH.



Integrated control unit

The OilGuard 2 W has a touchscreen with colour display.

- · Values, graphs, states or alarms can be displayed, respectively.
- An internal data logger allows the visualisation of the measured data covering the past 32 days.

Your representatives:

Measuring principle: Light source: Measuring span: Lowest measuring range:

Technical data

Technical data

UV fluorescence LED 280 nm 0 .. 3'000μg/l (ppb)* 0 .. 50μg/l (ppb)

Measuring ranges: Resolution: Detection limit:

8, freely programmable 0.01µg/l (ppb)* <0.1µg/l (ppb)*

Sample temperature: Ambient temperature: Ambient humidity: Protection:

0 .. +40 °C −10 .. +50 °C 0 .. 100 % rel. IP54

Power supply:

18 .. 30 VDC,

optional:

100 .. 240 VAC, 47 .. 63 Hz Power consumption max:

Installation

Sample inlet / drain:

Tube connection inside

Ø 12/25 mm

Sample flow: Sample inlet / drain: min. 3 l/min, unpressurized SS 316 L/ PVC

*Calibration with 16 EPA-PAH standard

Control unit

Input:

Display: Operation: Output:


2 × 0/4 .. 20 mA, galv. isolated 2 × relay 250 VAC, 4A $1 \times for option. flowmeter$


2 × 0/4 .. 20 mA

1/4 VGA, 3.5"

Touchscreen

Ethernet, Modbus TCP, SD card Digital interfaces: Profibus DP, Modbus RTU Optional:

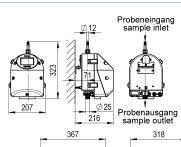

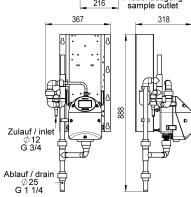



SIGRIST-PHOTOMETER AG

Hofurlistrasse 1 · CH-6373 Ennetbürgen Tel. +41 41 624 54 54 · Fax +41 41 624 54 55 www.photometer.com · info@photometer.com

